



Kurz-Kasch, Inc.
 Electronics Division
 Box 1246 • 2271 Arbor Blvd.
 Dayton, Ohio 45439
 Telephone (513) 299-0990

Operating Instructions

For Model 326AB----287C or 171C

GALAXIAN

MIDWAY

		SL2				START 2			SR2			5V	
		x				x			x				
LLP	SL1	SL5	SL3	LRP		START1	RLP	SR1	SR5	SR3	RRP	ON	OFF
	x	x	x			x	x	x	x	x			
		SL4		x		x			SR4		x		
		x							x				
	SL6		SL7			COIN		SR6		SR7		POWER	
	x		x			x		x		x	x	ON	OFF

1. Insert 326B card into program "B" connector, number side up.
2. Insert 326A card into program "A" connector, number side up.
3. Insert 287C card into test fixture.
4. Insert Galaxian game board into 287C card.
5. Connect a speaker to the speaker leads.
6. Select "Table" or "Upright" on 326A card.
7. Turn on AC power.
8. Push COIN or SR-6 to coin game.
9. PUSH: START 1 for 1 Player, START 2 for 2 Player.

UPRIGHT

TABLE

SL-1	#1L	SL-1
SL-3	#1R	SL-3
SL-5	#1 FIRE	SL-5
SL-1	#2L	SR-1
SL-3	#2R	SR-3
SL-5	#2 FIRE	SR-5

10. To check for all three colors, check for a low-going-high signal with a logic probe at pins 16, T, and U of the edge connector.

NOTE: This card set is programmed to use the black and white monitor through the TF-650.....