




Kurz-Kasch, Inc.

Electronics Division
 Box 1246
 2876 Culver Ave.
 Dayton, Ohio 45401
 Telephone (513) 296-0330

Operating Instructions

For Model TF-650

TF-650-3A, TF-650-5A

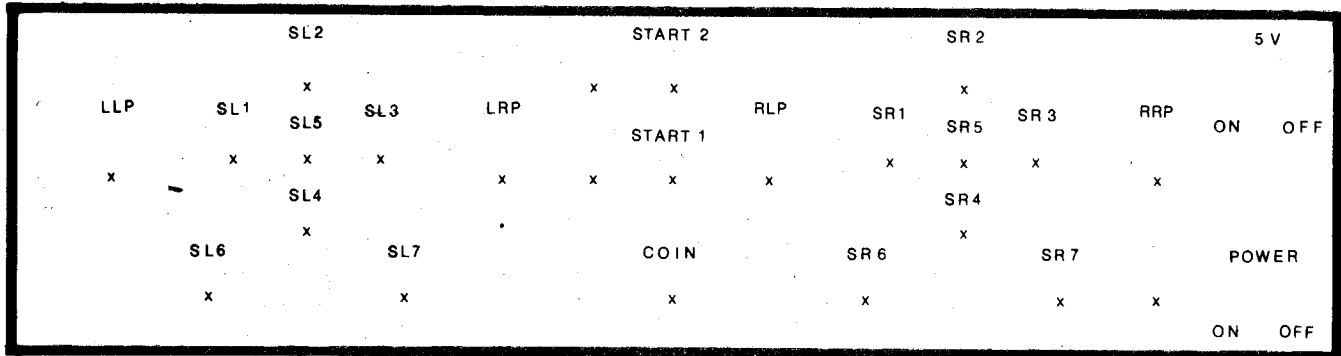

WARNING: When using AC/DC monitor be sure it is isolated from ground.

1. Remove two red head screws from bottom of fixture.
2. Place fixture on work board, formica side up. Attach board to fixture with 4 each 8 X 32 X 1 1/2" screws, washers and lock washers thru the 4 holes in board.
3. Connect braid (with mini-gator clip) to monitor ground, red wire to video, and black wire to audio. This is the 3 wire cable from fixture.
4. Insert fuse (2 amp - 130V) into fuse cap and then into fuse holder in fixture.
5. Insert proper program card for P.C. board to be tested into proper program connector (Example - Card 121 A into "Program A" connector and 121 B into "Program B" connector).
6. Insert P.C. edgeboard connector into green connector on front of fixture. BE SURE EDGE BOARD CONNECTOR IS LINED UP WITH SOLID LINE ON FIXTURE.
7. Turn power switch "on" only after all above has been done. If internal 5V power is required turn on "5V" switch.
8. Each program card has instructions which must be followed for each game.
9. Keep work board clean of metal particles.
10. Turn off power before removing P.C. board.
11. Regulator will get hot enough to burn you when testing a high current game so watch-it.